


# SOUND SOLUTION

PREMIUM ACOUSTICAL UNDERLAYMENT

## HARDWOOD AND ENGINEERED WOOD FLOOR INSTRUCTIONS FOR NAIL-DOWN INSTALLATION

1. Be sure sub-floor is clean and dry.
2. Roll out one section of Sound Solution parallel to a wall and perpendicular to the direction of the flooring. The perimeter edges of Sound Solution need to be flush with the wall.
3. Next install the flooring planks on top of the underlayment according to the manufacturer's instructions. If using a pneumatic nailer, adjust the air pressure such that the underlayment is not compressed or puckered at the location of the nail.
4. Install additional sections of underlayment, butting the seams together, until installation is complete. Tape may be used to hold the Sound Solution in place while the flooring is being laid.
5. Be sure to allow expansion gaps at perimeter per manufacturer's directions

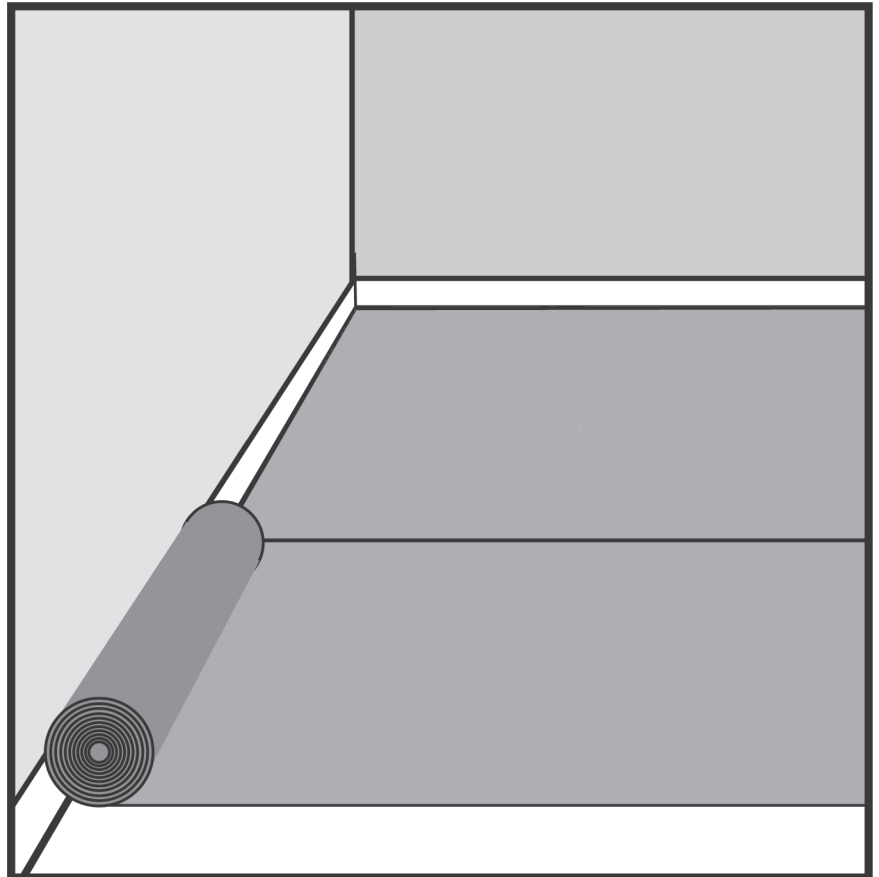

S I M P L E • E A S Y • E F F E C T I V E

**GLUE DOWN** Installation Instructions may be obtained by calling (800) 872-8426. For comprehensive warranty coverage on glue down installations use Sound Solution High Performance Adhesive (HPA) System.