

---

# SOUNDSOLUTION WITH VAPOR BLOC™

## PREMIUM ACOUSTICAL UNDERLAYMENT FOR LAMINATE & WOOD FLOORS

---



Sound Solution underlayment can be installed utilizing the floating or nail-down installation method with the film side up, fabric side down. NOTE: Nail-down installation method compromises vapor barrier. Do NOT glue down Sound Solution Vapor Bloc. Sound Solution without Vapor Bloc film is available for glue down installations. For more information please call (800) 872-8426.

---

### FLOATING FLOOR INSTALLATION INSTRUCTIONS

---

1. Be sure sub-floor is **clean and dry**.
2. Roll out one 6 foot section of Sound Solution Vapor Bloc parallel to the wall and in the same direction as you plan to install the laminate or floating floor. The product will roll out with the **Vapor Bloc film up and the foam side down** to the sub-floor.
3. Next install the laminate or floating floor planks atop the underlayment according to the **manufacturer's instructions**. Be sure that you are still able to see the edge of the underlayment so that you can properly line up the next roll.
4. Install the next 6 foot section of underlayment, butting the foam underlayment seams together. Remove release film and **press overlapping Vapor Bloc film into pre-applied adhesive**, making certain the film is securely bonded to the adjacent section of underlayment. Repeat the above steps until installation is complete.
5. Be sure to allow **appropriate expansion** gaps at the perimeter of the installation as recommended by the laminate or floating floor manufacturer.

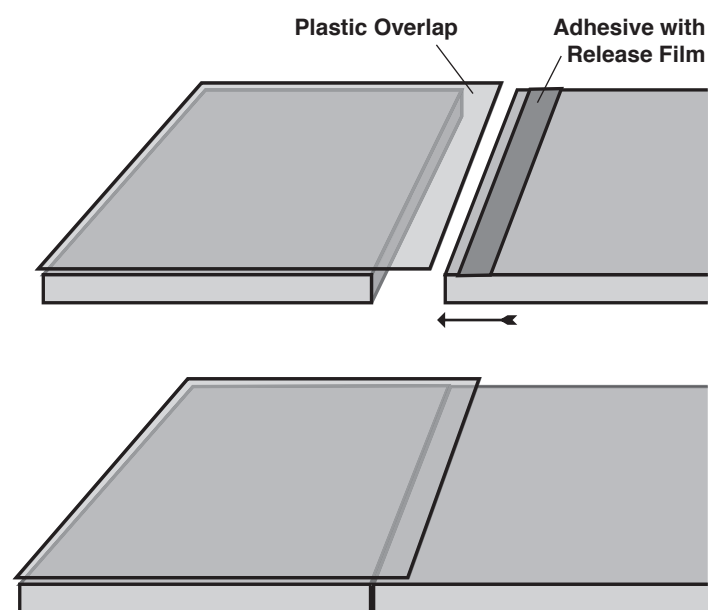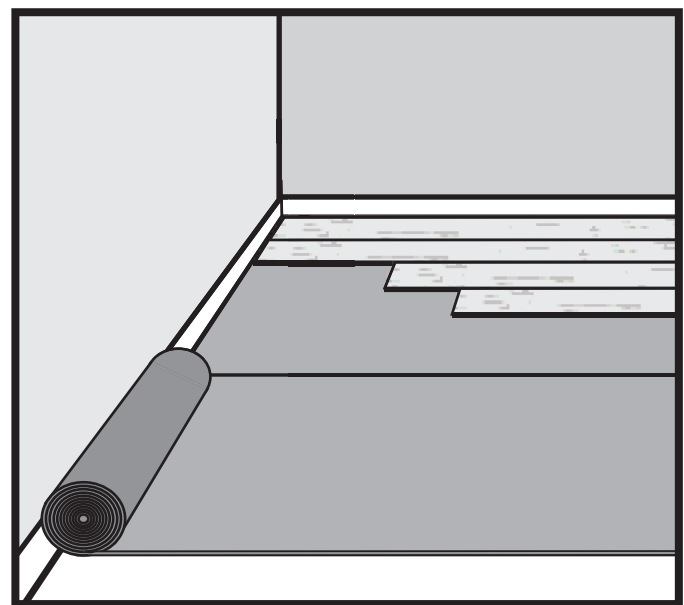

S I M P L E • E A S Y • E F F E C T I V E